Samsung Omnia

Quick Reference Guide

Some of the screens and descriptions in this guide may differ from your device depending on the software of the device or your service provider.

Contents

Basics to operate your Omnia

Turnning on your Omnia 3
Using Widgets 4
Accessing the Main Menu 6
Using shortcuts 8
Locking your Omnia 10
Using the motion sensor 14
Using the Etiquette pause 15
Changing the default function of the trackpad 16
Customising the Start menu 17
Zooming in on the screen 18

Tips to operate your Omnia

Transferring files 19
Backing up the data 21
Synchronising with Windows Media Player 26
Setting up an email account 29
Using the internet 30
Checking the memory 32
Activating the Wi-Fi or Bluetooth feature 33

Tips to troubleshoot your Omnia

Closing programs 36
Resetting your Omnia 38
Aligning the screen 39

Basics to operate your Omnia

Turnning on your Omnia

Press and hold the Power key on the top of your Omnia.

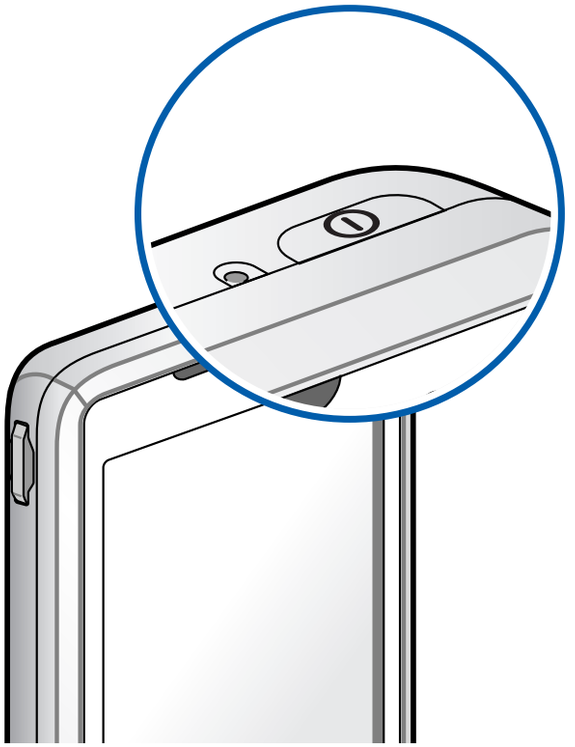

To conserve battery power when you do not use the Omnia, turn the touch screen off by pressing the Power key. To turn the touch screen back on, press the Power key.

Using Widgets

Widgets are user friendly shortcuts to commonly used applications allowing you to customise the Today screen.

Drag a widget from the toolbar to the Today screen. You can position the widget anywhere on the screen but cannot add the more widgets you want.

To open or close the toolbar, tap the arrow at the bottom of the screen.

When the widgets are unavailable on the Today screen, activate the widgets. From the Today screen, tap **Start** → **Settings** → **Today** → **Items** tab → **Samsung Widget** → **ok**.

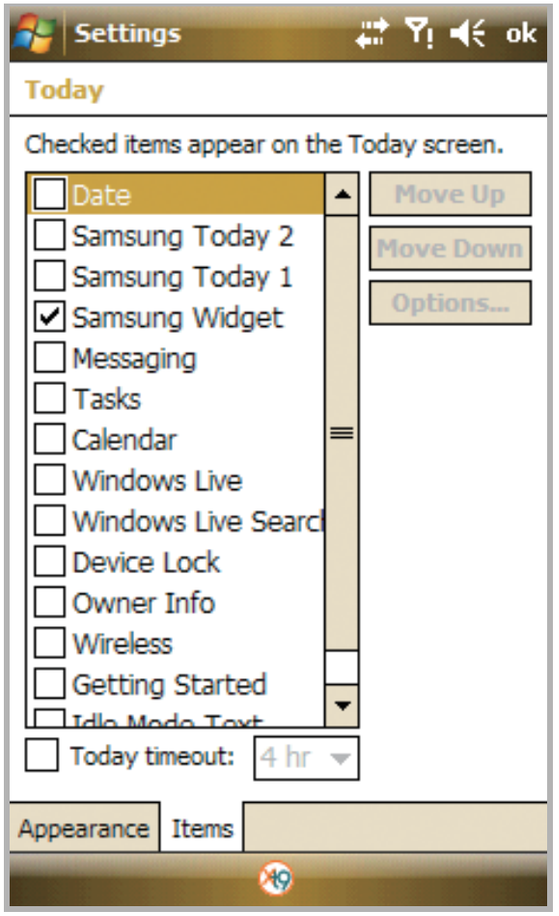

Accessing the Main Menu

Press the Main menu key on the right side of your Omnia.

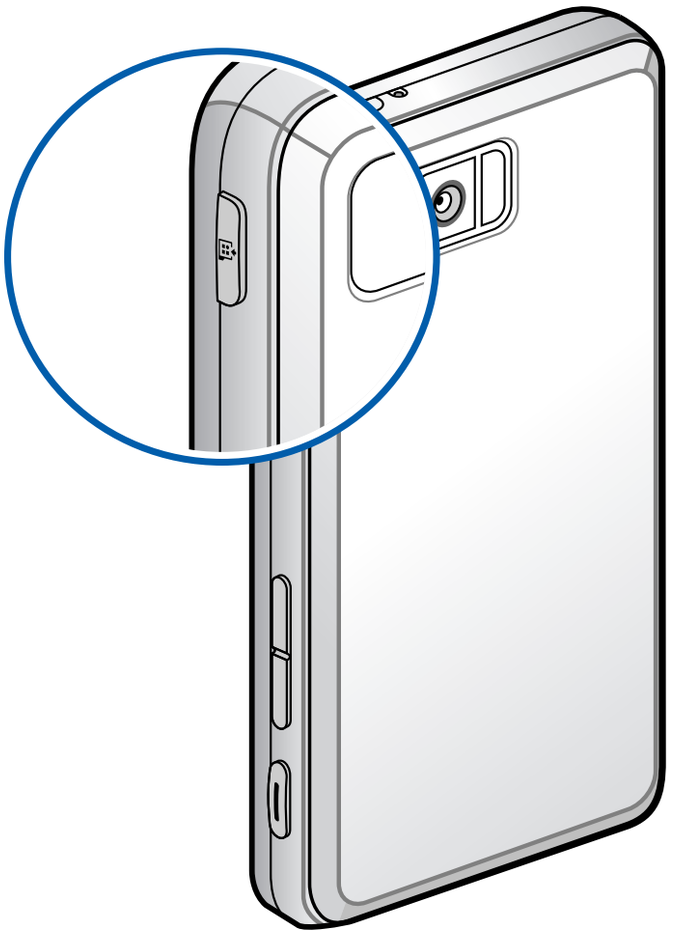

You can also tap **Start** → **Programs** → **Main Menu** from the Today screen.

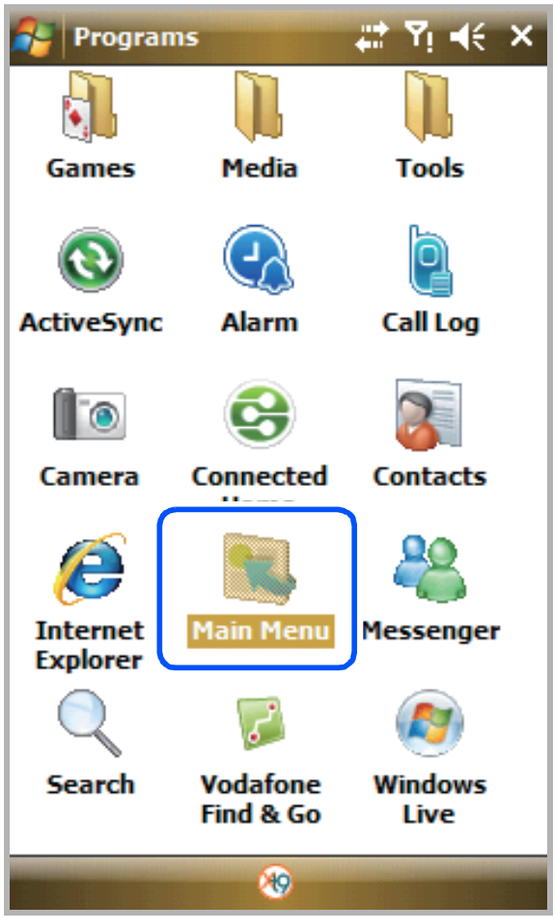

Using shortcuts

Press the Main menu key and tap **Shortcuts**. Tap an icon to launch the corresponding application.

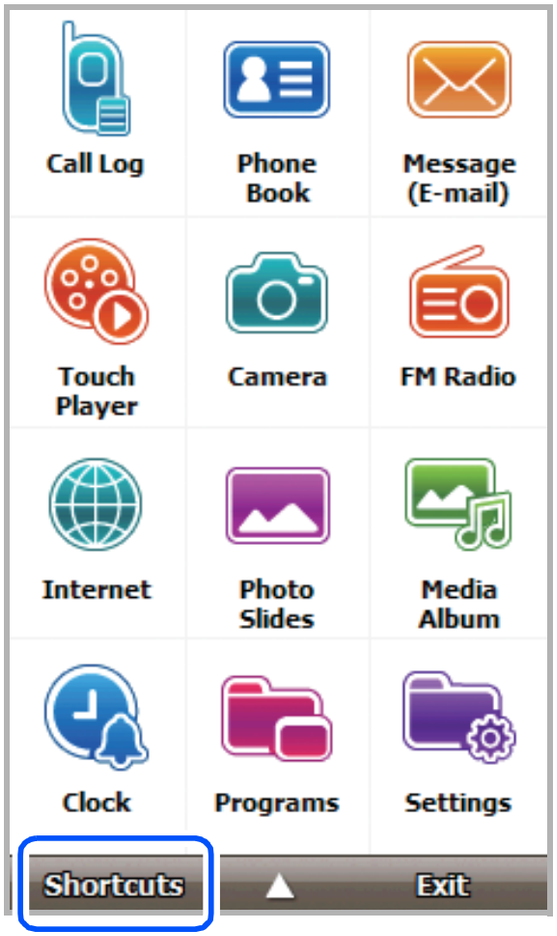

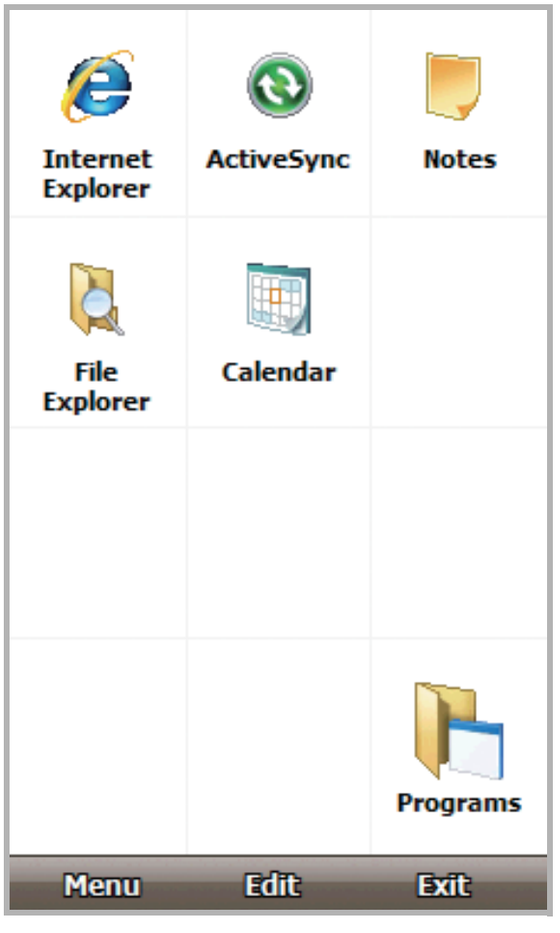

To customise shortcuts, tap **Edit**. Tap an icon on the left and drag it into the location you want.

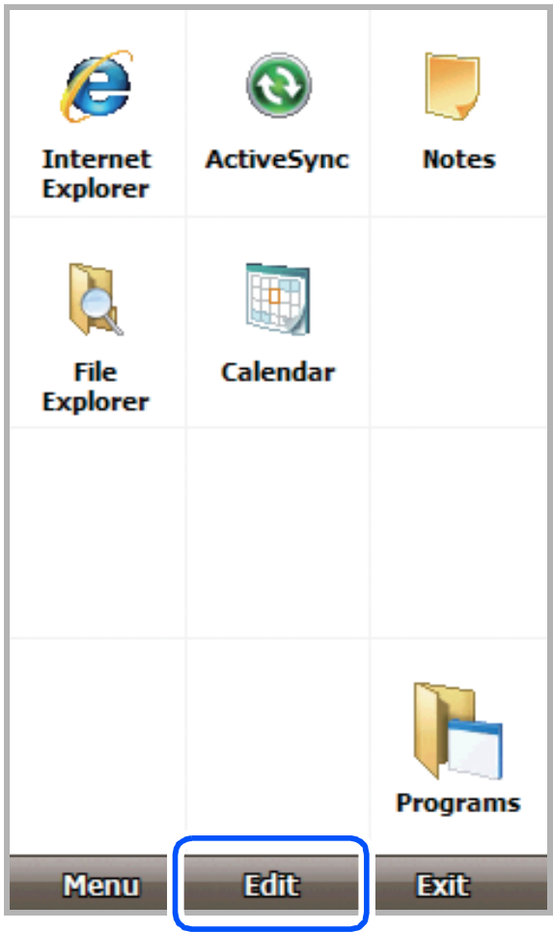

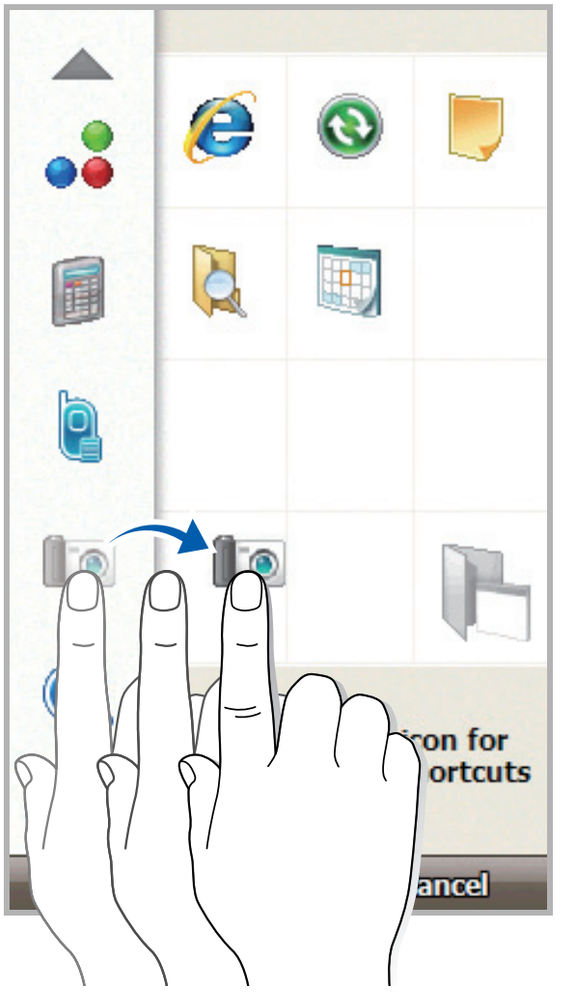

Locking your Omnia

To lock the touch screen and keys, press and hold the End/Device lock key.

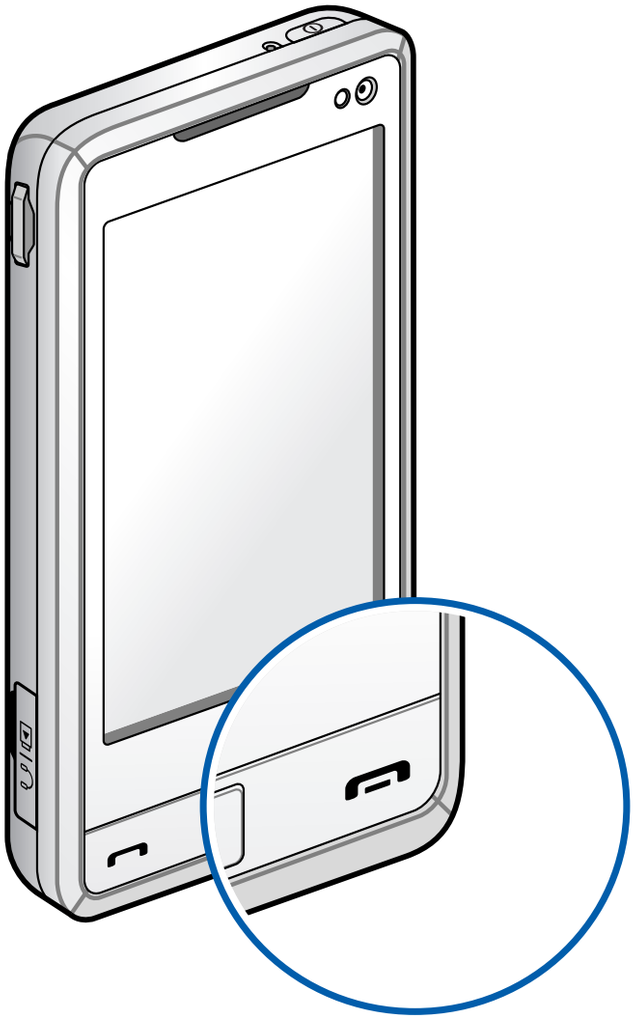

To unlock, tap **Unlock** → **Unlock**.

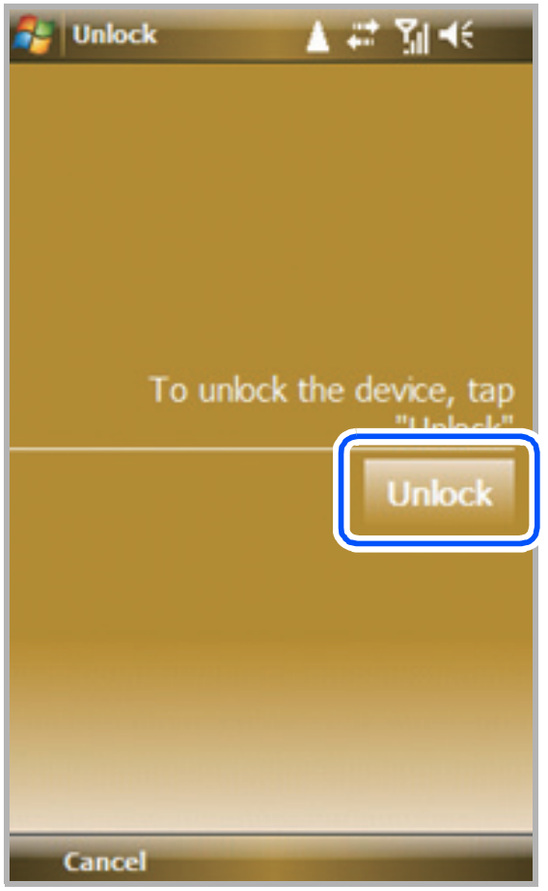

If necessary, change the default function of the End/Device lock key. From the Today screen, tap **Start** → **Settings** → **Personal** tab → **Buttons** → **End Key** tab → **Lock device** → **ok**.

To lock the Omnia with a PIN code, from the Today screen, tap **Start** → **Settings** → **Personal** tab → **Lock** → **Prompt if device unused for** and set details.

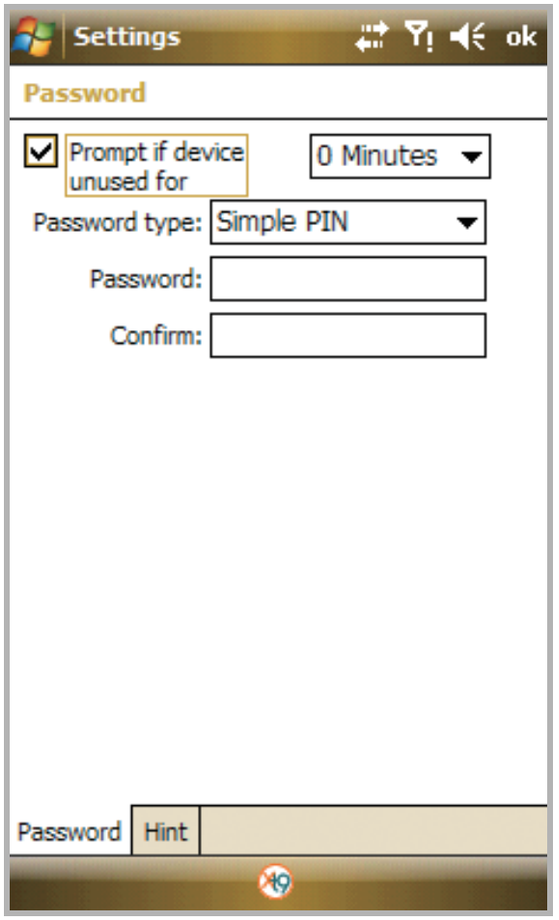

To unlock the Omnia locked with a PIN code, enter the PIN code and tap **Unlock**.

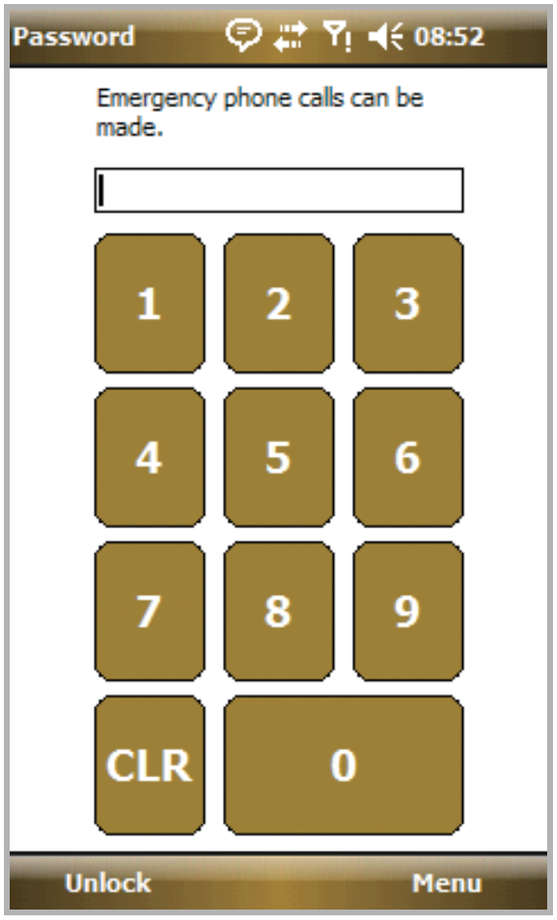

Using the motion sensor

Your Omnia has a motion sensor enabling it to change the screen mode (Portrait and Landscape) automatically according to the direction you are holding the Omnia.

To activate the motion sensor, from the Today screen, tap **Start** → **Settings** → **System** tab → **Motion Sensor** → **Automatic** → **ok**.

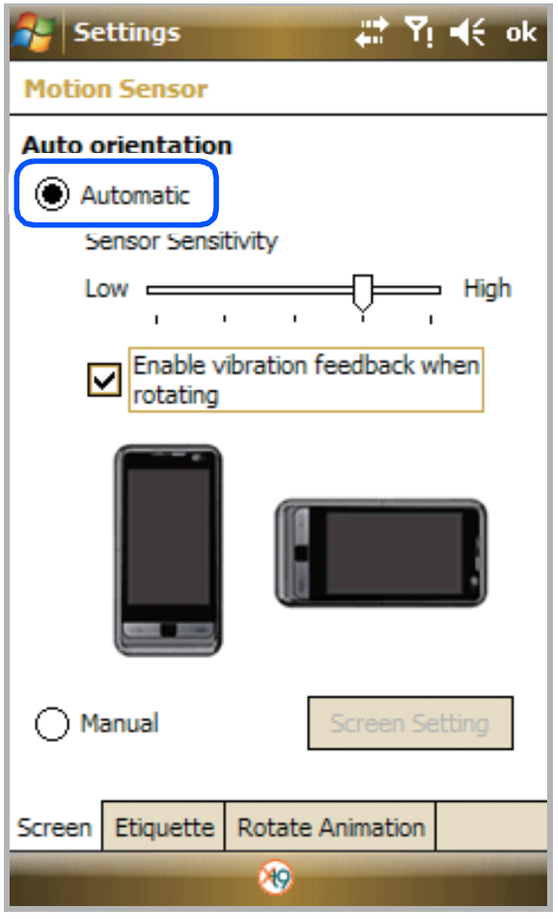

Even if the motion sensor is activated, the screen mode does not change when the Omnia is locked or in Dimming mode. Also, some programs like Digital Frame, Camera, and Smart reader do not support the motion sensor.

Using the Etiquette pause

You can temporarily pause the music player or mute event alarms and ringtones by placing the Omnia face down.

From the Today screen, tap **Start** → **Settings** → **System** tab → **Motion Sensor** → **Etiquette** tab → **Etiquette pause** → **ok**.

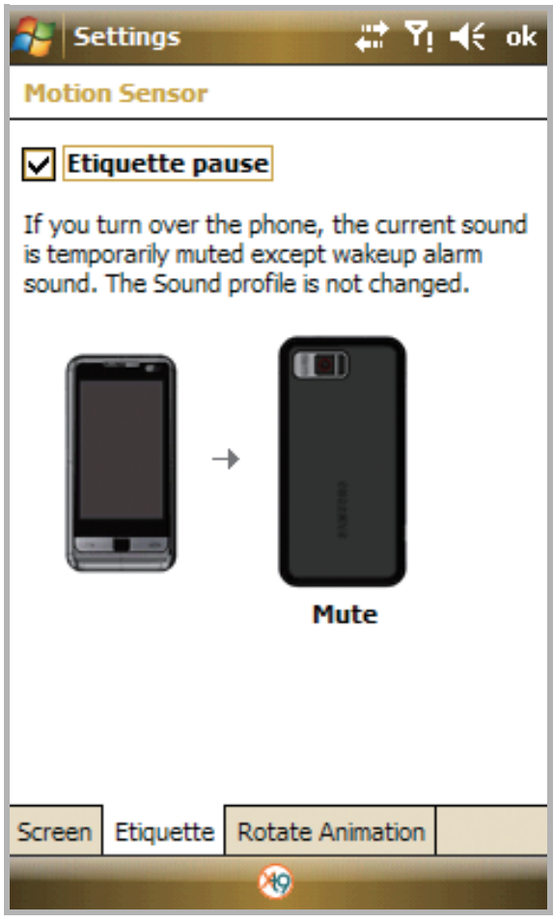

Changing the default function of the trackpad

From the Today screen, tap **Start** → **Settings** → **System** tab → **Finger Mouse** → **4-way Navigation** → **ok**.

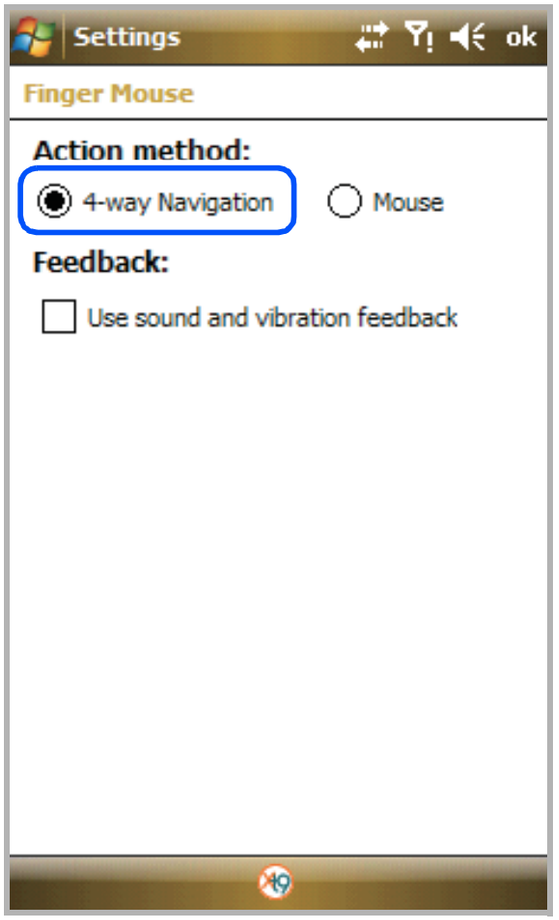

Customising the Start menu

Customise the menus that appear when you tap **Start** from the Today screen. You can add up to 6 items in the Start menu.

From the Today screen, tap **Start** → **Settings** → **Personal** tab → **Menus**. Select the programs you want and tap **ok**.

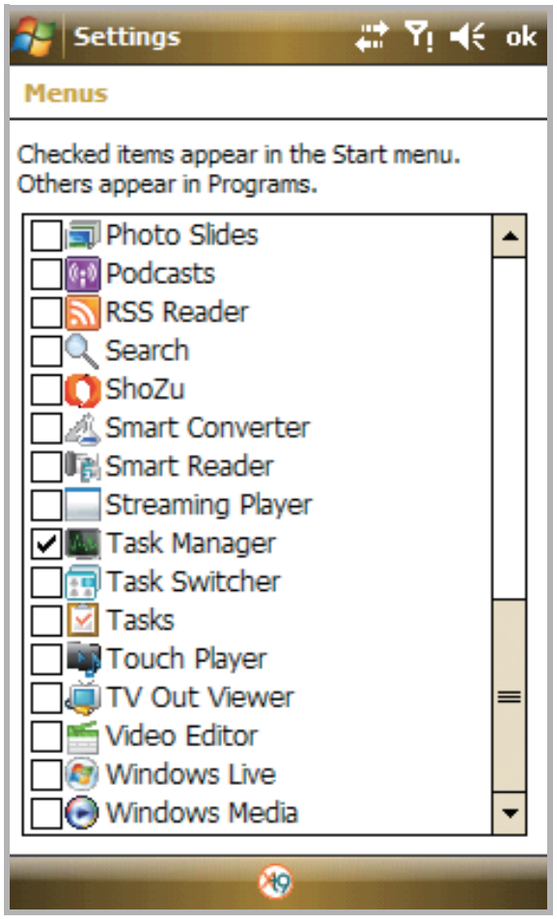

Zooming in on the screen

Zoom in or out on the screen to view your documents or messages.

1. Press and hold the Up volume key.
   A magnifying glass appears and the screen automatically zoom in.
2. Scroll through the screen.
3. Press the End key or tap the screen twice to return to the normal mode.

Tips to operate your Omnia

Transferring files

Connect your Omnia to your PC (USB connection) or use a memory card (microSD™ memory card) to transfer files from a PC to the Omnia.

Via USB connection (Mass storage):

1 From the Today screen, tap **Start** → **Settings** → **Connections** tab → **USB Connection Mode** → **Mass storage** → **ok**.

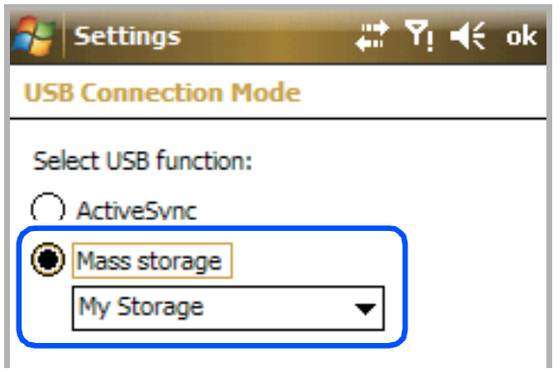

2 Using an optional PC data cable, connect the multifunction jack on your Omnia to a PC.

When connected, a pop-up window will appear on the PC.

3 Select **Open folder to view files** in the pop-up window on the PC.

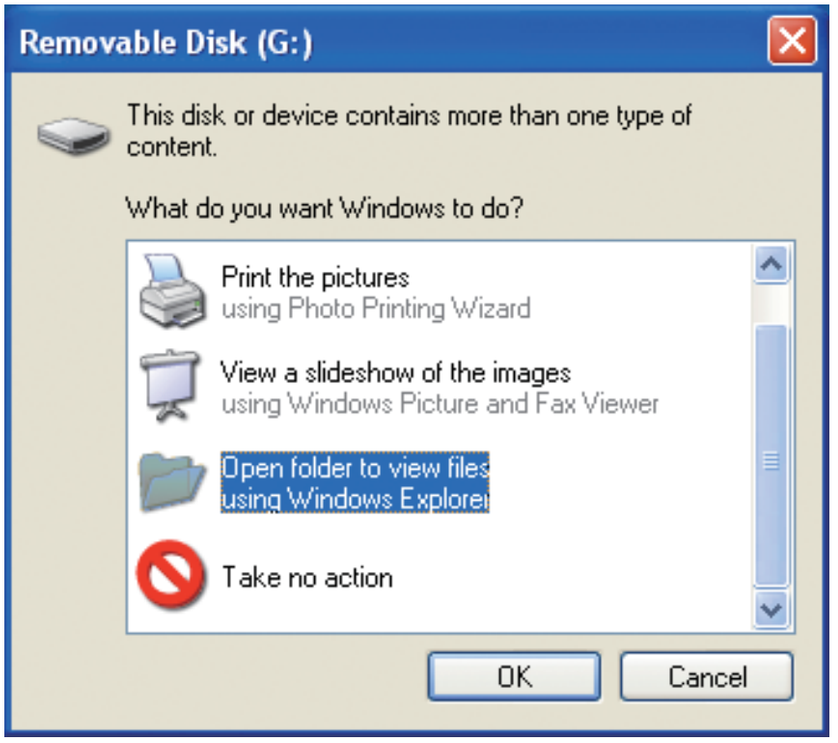
Removable Disk (G:)
This disk or device contains more than one type of content.
What do you want Windows to do?
Print the pictures
using Photo Printing Wizard
View a slideshow of the images
using Windows Picture and Fax Viewer
Open folder to view files
using Windows Explorer
Take no action
OK
Cancel

4 Copy files from the PC to your Omnia.
The copied files are stored in My Storage.

Via a memory card:

1 Insert your memory card into your PC.
2 Select **Open folder to view files** in the pop-up window on the PC.
3 Copy files from the PC to the memory card.
4 Remove the memory card from the PC and insert it into your Omnia.

Backing up the data

Synchnonise your Omnia with a PC and back up the data by using ActiveSync and MITs Wizard.

Via ActiveSync:

1 Install ActiveSync on your PC using the supplied CD.

2 From the Today screen, tap **Start** → **Settings** → **Connections** tab → **USB Connection Mode** → **ActiveSync** → **ok**.

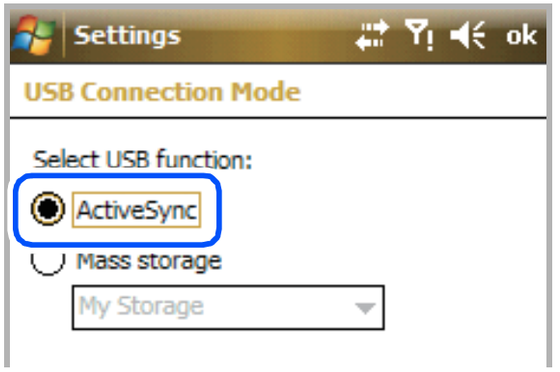

3 Using an optional PC data cable, connect the multifunction jack on your Omnia to a PC.

4 When the Pocket PC Sync Setup Wizard opens, click **Next**.

Synchronization Setup Wizard
Welcome to the Pocket PC Sync Setup Wizard
To set up a sync partnership between this computer and your Pocket PC, click Next.
If you click Cancel, you can still:
Copy and move files between your Pocket PC and this computer
Add and remove programs on your Pocket PC
< Back
Next >
Cancel

5 Select the data you want to synchronise with and click **Next**.

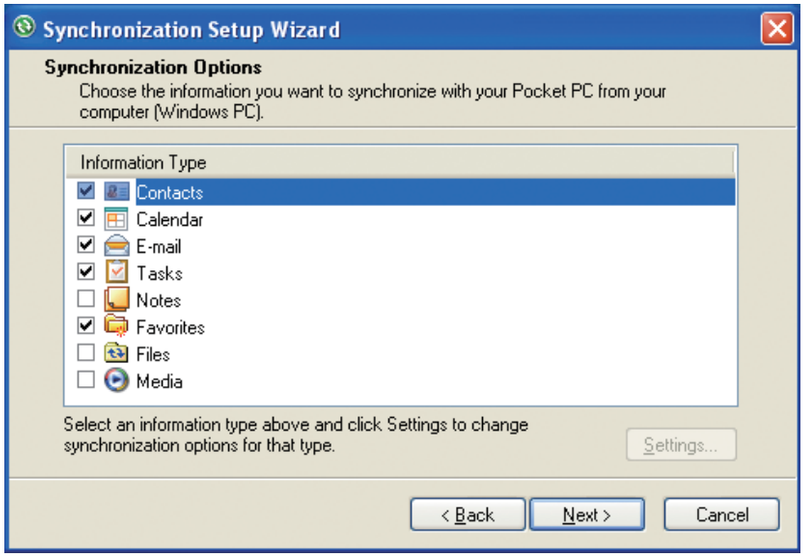

You can back up these kinds of categories; Contacts, Calendar, E-mail, Tasks, Notes, Favorites, Files, and Media

6 Select the check box, if necessary, and click **Next**.

7 Click **Finish**.

8 To manually find and copy files from your Omnia to a PC and vice versa, click **Explore** from the Microsoft ActiveSync window.

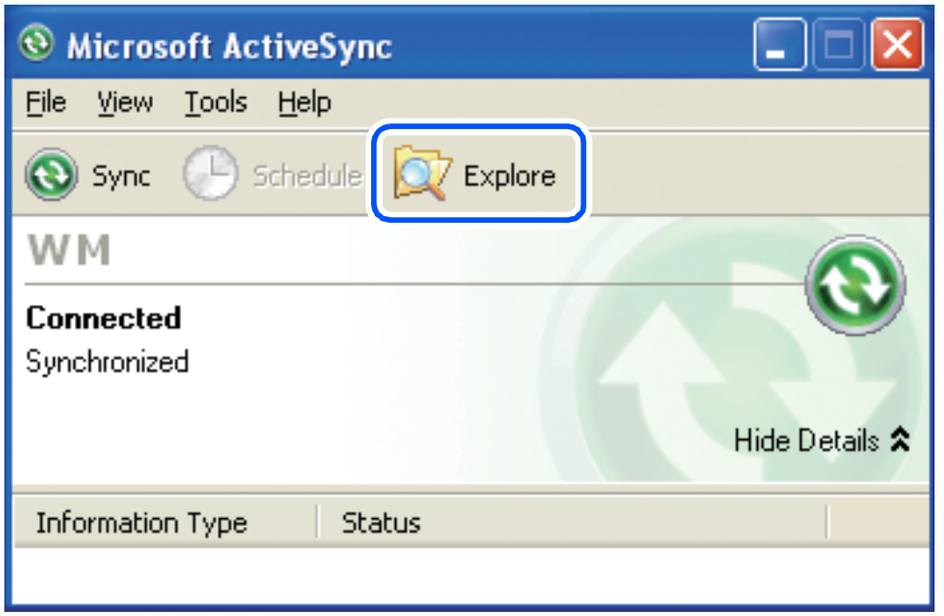

Via MITs Wizard:

1 Insert the supplied CD to your PC.

2 Select **Addition Tools** → **MITs Wizard**.

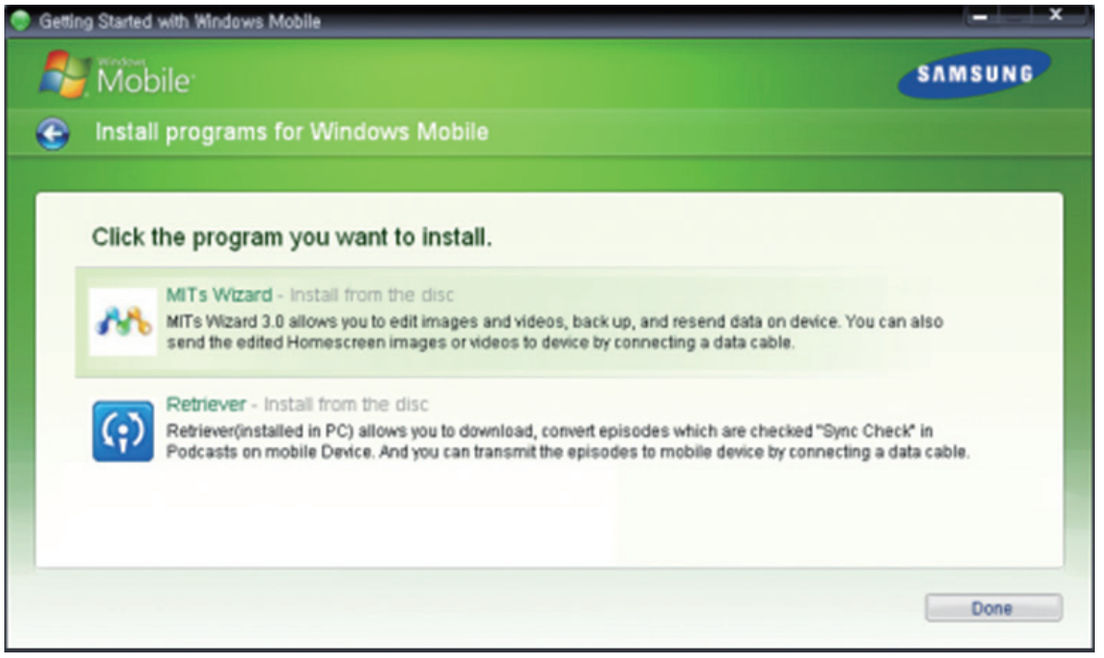
Getting Started with Windows Mobile
Windows Mobile
SAMSUNG
Install programs for Windows Mobile
Click the program you want to install.
MITs Wizard - Install from the disc
MITs Wizard 3.0 allows you to edit images and videos, back up, and resend data on device. You can also send the edited Homescreen images or videos to device by connecting a data cable.
Retriever - Install from the disc
Retriever(installed in PC) allows you to download, convert episodes which are checked "Sync Check" in Podcasts on mobile Device. And you can transmit the episodes to mobile device by connecting a data cable.
Done

3 From the Today screen, tap **Start** → **Settings** → **Connections** tab → **USB Connection Mode** → **ActiveSync** → **ok**.

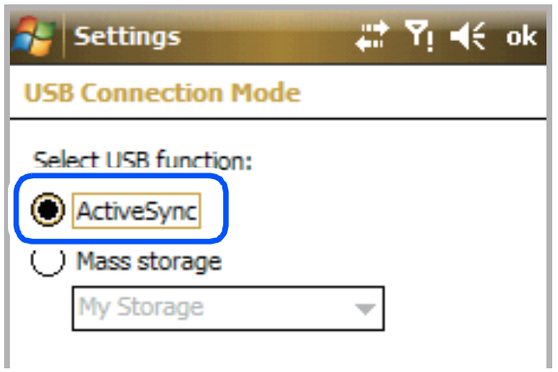

4 Using an optional PC data cable, connect the multifunction jack on your Omnia to PC.

5 Run MITs Wizard and click the **Backup Manager** tab.

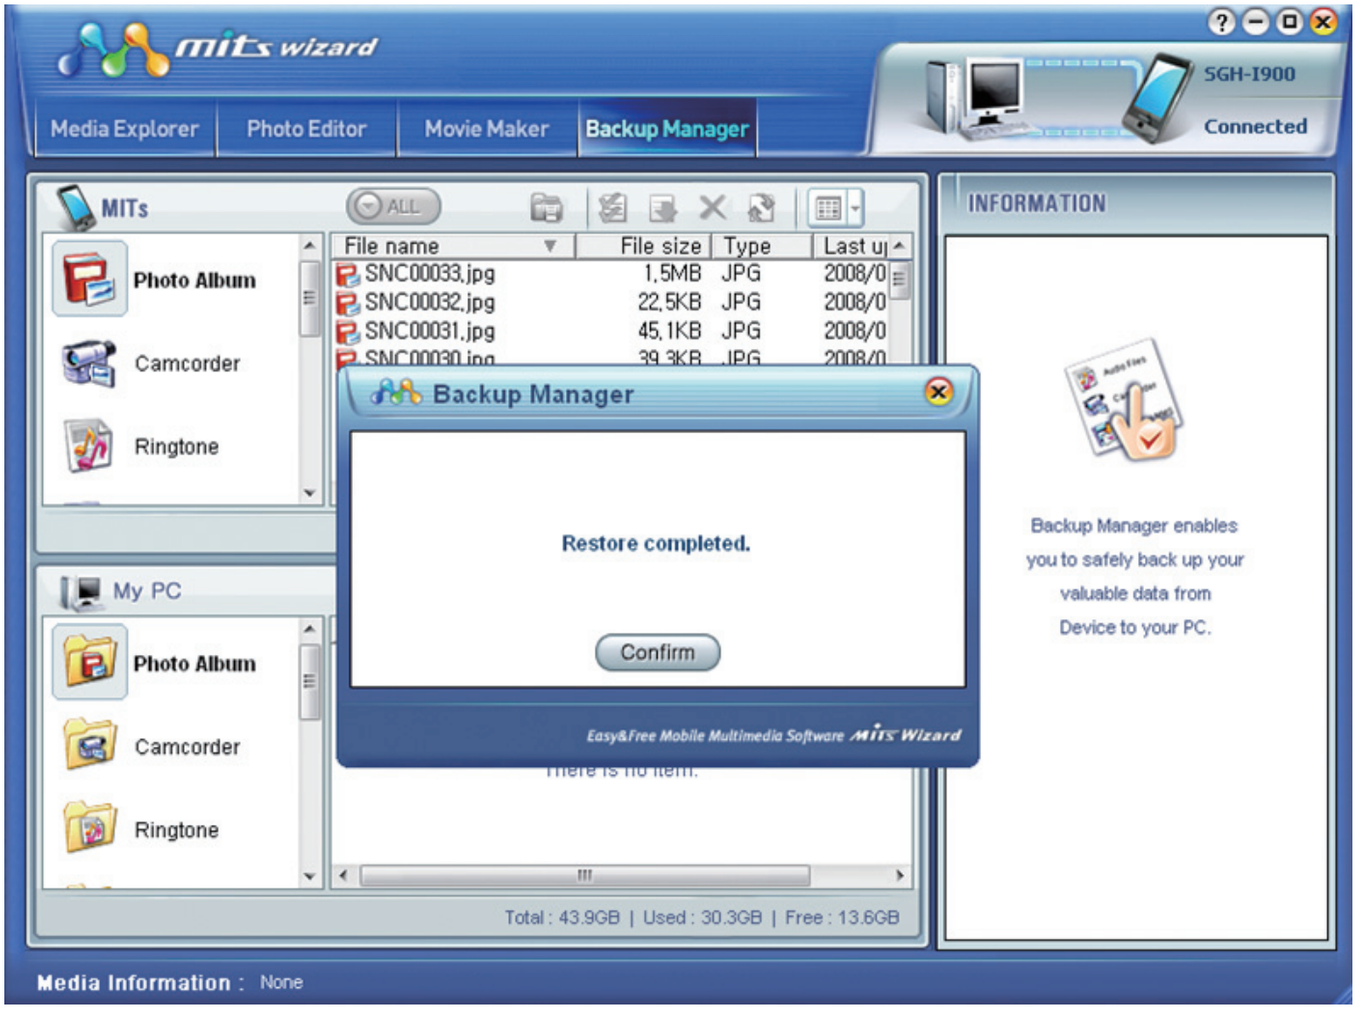

6 Back up the data from Omnia to your PC.

Synchronising with Windows Media Player

You can synchronise music files with Windows Media Player on your PC.

1 From the Today screen, tap **Start** → **Settings** → **Connections** tab → **USB Connection Mode** → **ActiveSync** → **ok**.

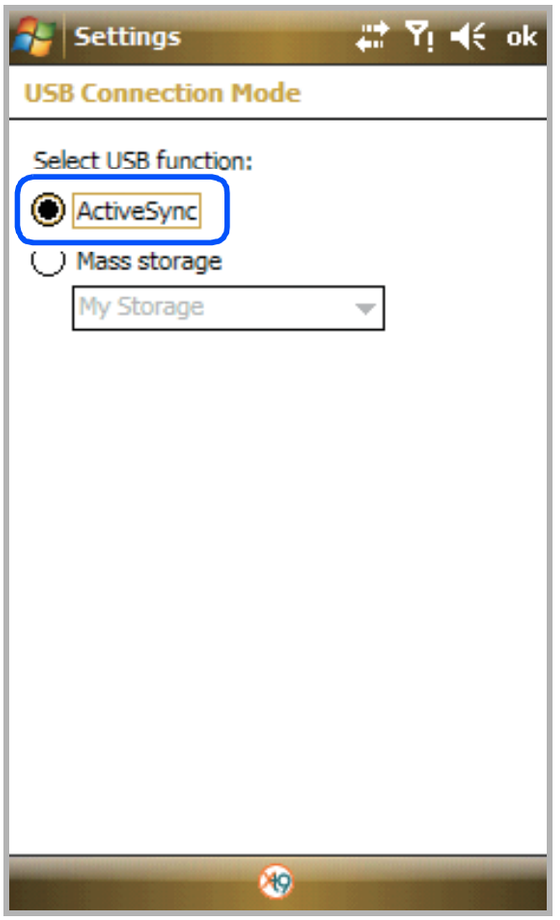

2 Using an optional PC data cable, connect the multifunction jack on your Omnia to a PC.

3 Run Windows Media Player on the PC.

4 Click the **Sync** tab.

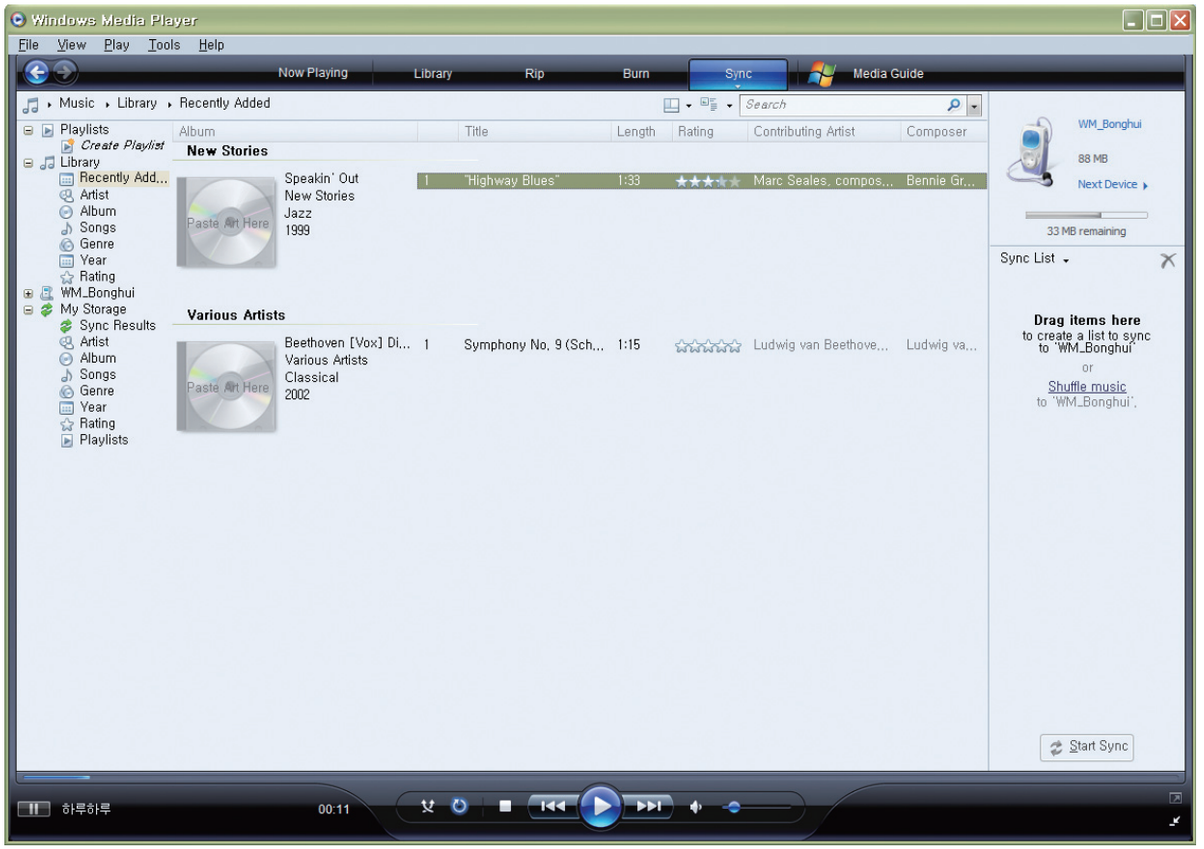

5 Select and drag the files you want to the sync list.

Click **Shuffle music to device** to make the sync list automatically.

6 Click **Start Sync**.

7 From the Today screen, tap **Start** → **Programs** → **Windows Media**.

8 Tap **Library** at the top line of the screen and select **My Storage**.

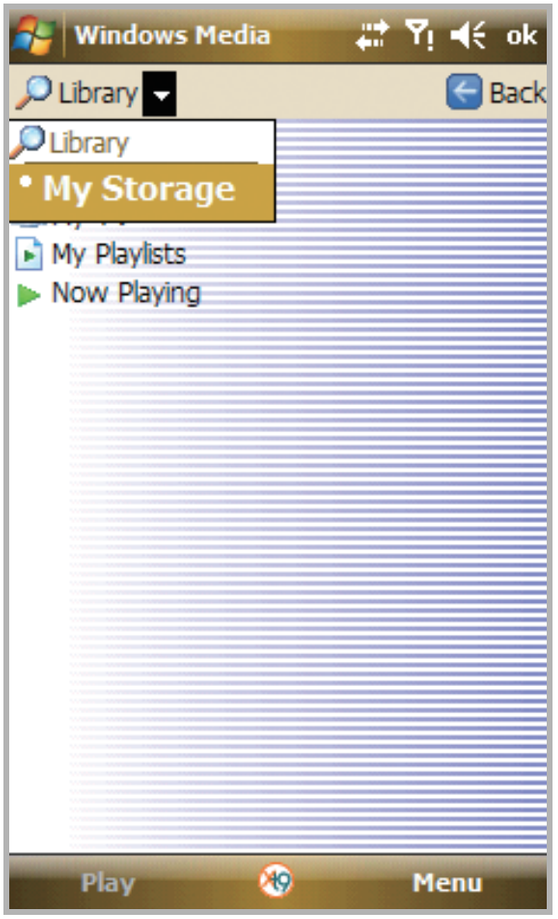

9 Tap **Menu** → **Update Library...** to update the copied files.

Setting up an email account

Create an email account to retrieve and send emails. The following steps may differ depending on the email service type. For more details, tap **Start** → **Help**.

1 From the Today screen, tap **Start** → **Messaging** → **Setup E-mail**.

2 Enter an email address and password and tap **Next**.

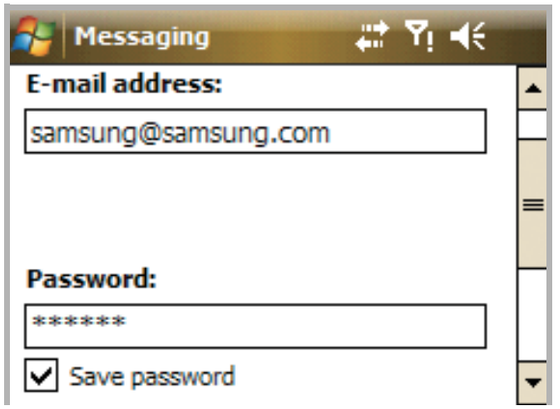

3 Tap **Next**.

4 Enter a user name and tap **Next**.

5 Select the frequency to retrieve your emails and tap **Finish**.

Using the internet

The Opera browser on your Omnia is great for surfing the internet. Not only is it faster than most other browsers, but also it looks great.

To open the web browser,

1. From the Today screen, tap **Start** → **Opera Browser**.
2. Tap the address bar and enter a web address.
3. Tap to open the web page.

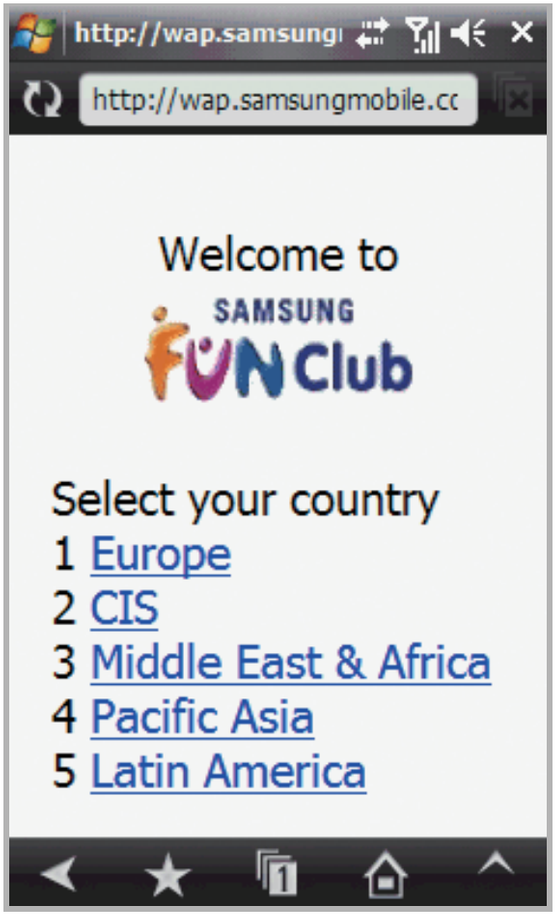

Tap and hold the web page to open available options.

To bookmark web sites,

While viewing the web page, tap at the bottom right corner of the screen and tap → .

You can also send your bookmarks to other people by tapping ( ).

Checking the memory

My Storage is used to save your data and media files.

To check the memory of My storage, from the Today screen, tap **Start** → **Settings** → **System** tab → **Memory** → **Storage Card** tab → **My Storage**.

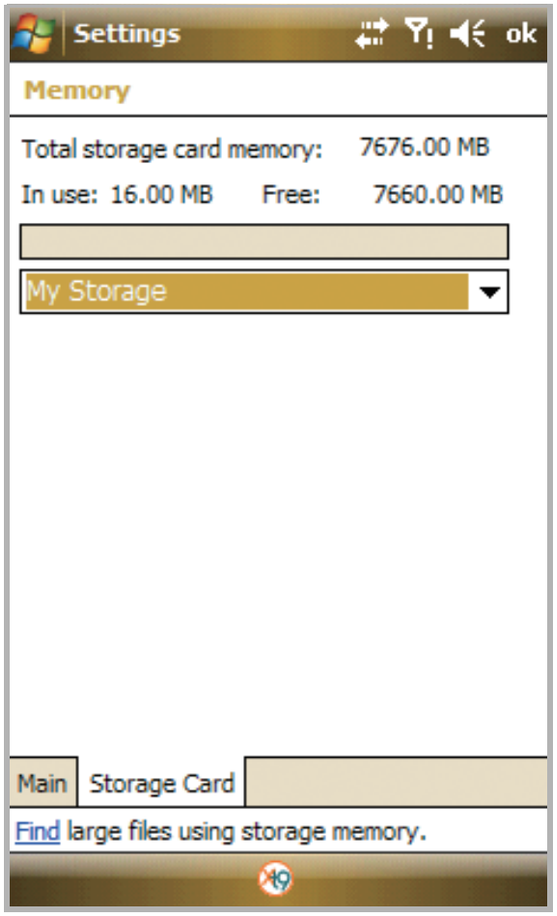

My Storage may be labelled differently depending on your region or service provider.

Activating the Wi-Fi or Bluetooth feature

There are a number of easy ways to activate the Wi-Fi or Bluetooth feature.

Using the widgets:

1. From the Today screen, drag the Wireless Manager widget ( ) onto the Today screen.
2. Tap **Wi-Fi off** or **Bluetooth off** to activate the Wi-Fi or Bluetooth feature.

Using the Samsung today screen:

1 From the Today screen, tap .

2 Tap to switch to .

3 Tap or to activate the Wi-Fi or Bluetooth feature.

Using the indicator on the top line:

1 From the Today screen, tap the service reception icon ( ).

2 Tap **Wireless Manager**.

3 Tap **Wi-Fi** or **Bluetooth** to activate the Wi-Fi or Bluetooth feature.

Tips to troubleshoot your Omnia

Closing programs

Tapping ✕ does not end current program and leave it running in the background. Applications running in the background will drain more battery and may cause your Omnia to run slowly.

End unnecessary programs using Task Switcher or Task Manager.

Via Task Switcher:

Press and hold the Main menu key. Scroll to a program and tap **End tasks** → ⊖, or tap **End all tasks**.

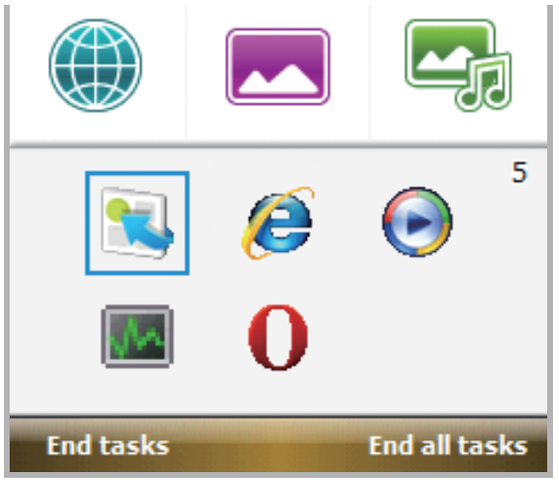

Via Task Manager:

1 From the Today screen, tap **Start** → **Settings** → **System** tab → **Task Manager**.

2 Tap a program and **End Task**, or tap **Menu** → **End All Tasks**.

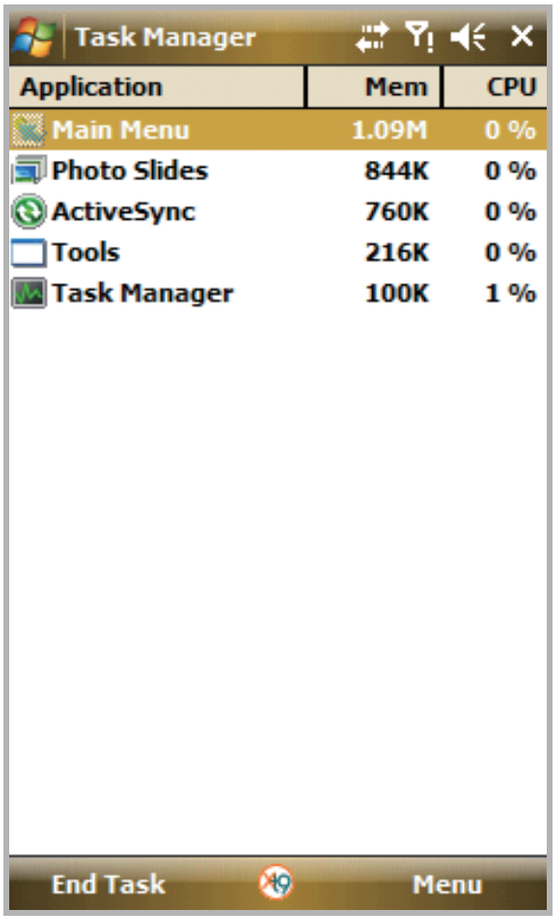

If Task Switcher or Task Manager do not work, perform a soft reset. See page 36.

Resetting your Omnia

If your Omnia responds slowly, stops responding, or freezes, perform a soft reset. A soft reset causes the Omnia to restart and re-adjust memory allocation. Unsaved data in an open window may be lost.

Press the Rest key inside the hole which is next to the Power key.

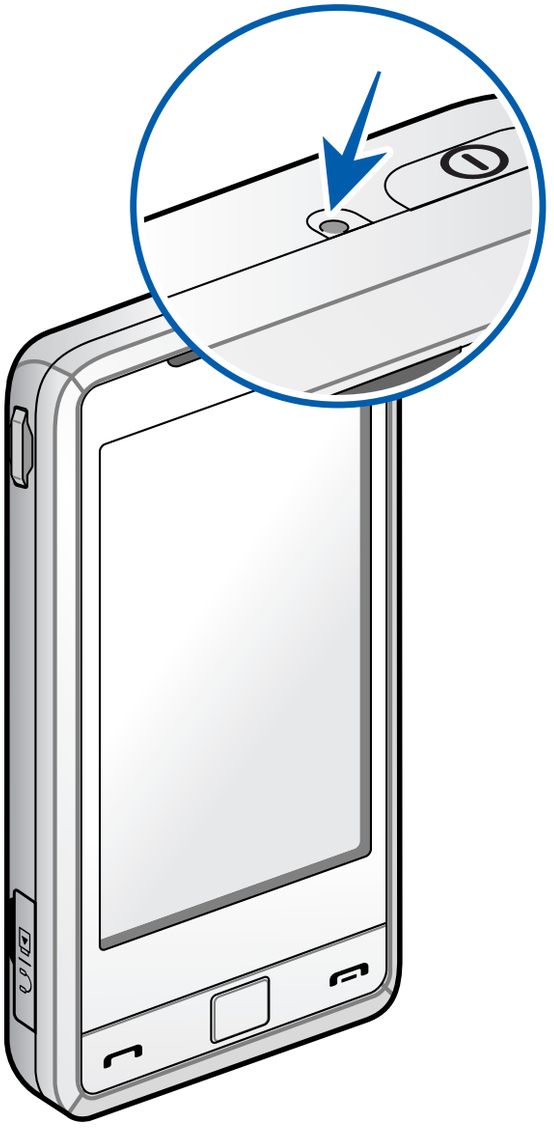

Aligning the screen

If your Omnia does not respond accurately to your taps, realign the screen.

From the Today screen, tap **Start** → **Settings** → **System** tab → **Screen** → **Align Screen**. Follow on-screen instructions.

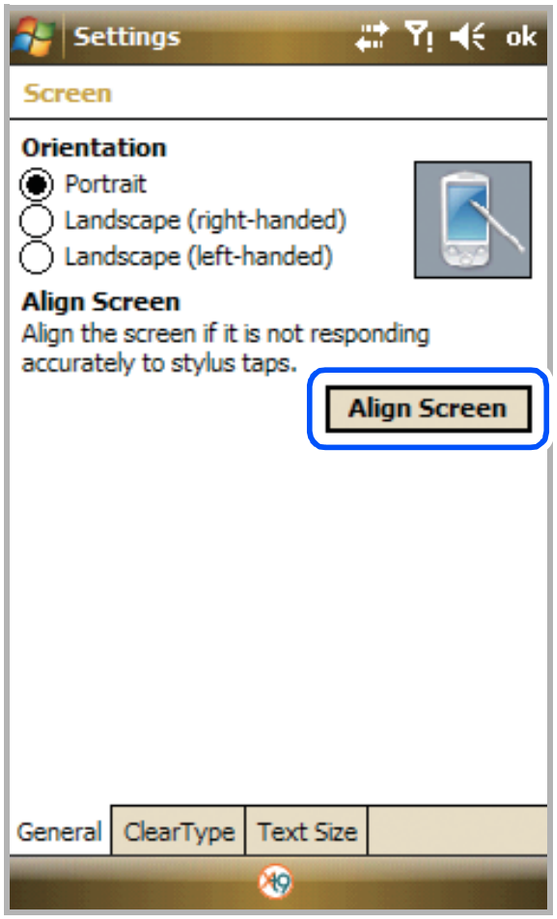

SAMSUNG ELECTRONICS

World Wide Web
http://www.samsungmobile.com

Printed in Korea
Code No.:GH68-21251A
English. 10/2008. Rev. 1.0